



Dormer Flashing at the Roof Wall Joint

Concentrate on the corners and think like water when overlapping the layers.

1. Cover roof/wall gap w/ peel & stick membrane and fold underlayment up wall. Fold higher than step flashing for easy verification

2. Base flashing in roofing cement.


3. First step flashing should turn corner and extend over base flashing.

4. Nail through shingle into roof to avoid movement problems between roof and wall.

5. Shingle extends below step flashing. Next step flashing aligns above w/ next shingle bottom.

6. At the top, fold a closure flashing with a piece of sheet metal that can tuck into the crotch where roof meets soffit.

7. Install the house wrap over the top of the step flashing and base flashing.

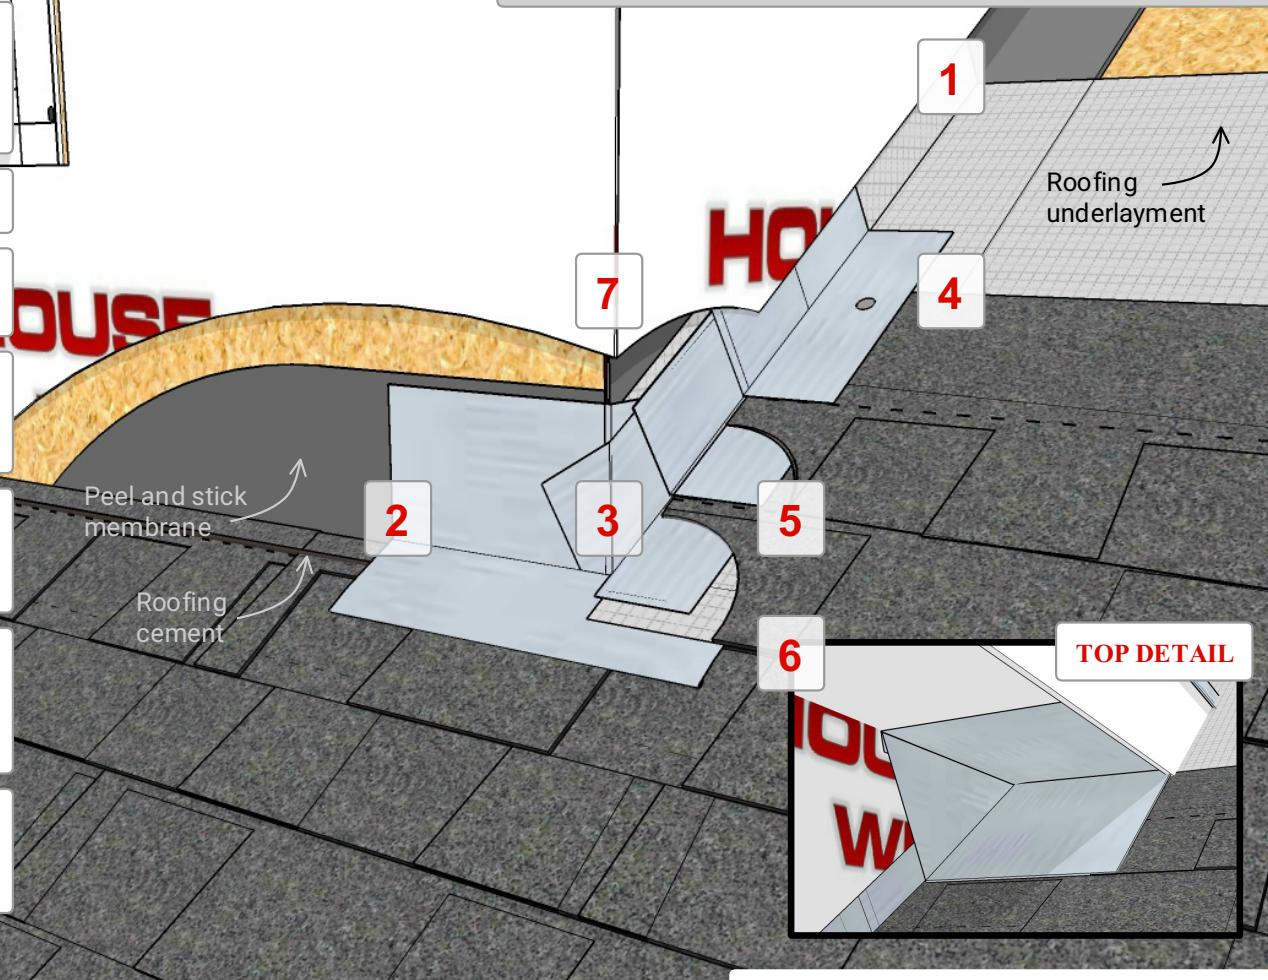

Watch this detail sequence on your phone: <http://goo.gl/RFndqx>

Source: Building America Solutions Center
Technical assistance: Doug Horgan (BOWA), Dan Whitmore (Hammer & Hand), Matt Jackson (Timber Tailor)
Illustration: Matt Jackson, Daniel Morrison
Copyright 2016 SGC Horizon
www.protradecraft.com